


NSK

MEGATORQUE MOTOR™ SYSTEM User's Manual (EDC Driver Unit System) PN series supplemental manual

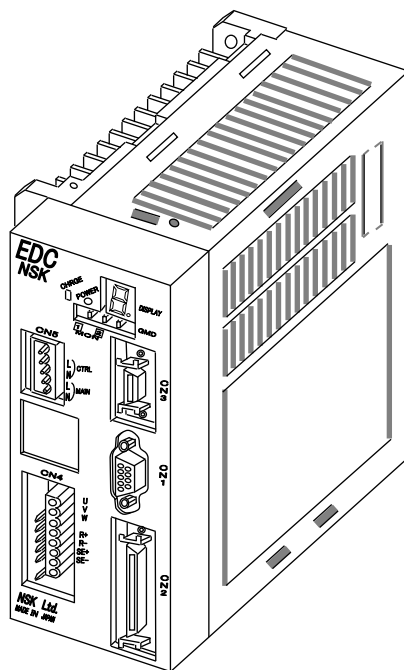

NSK Ltd.

Document Number: C20169-05

Limited Warranty

NSK Ltd. warrants its products to be free from defects in material and/or workmanship which NSK Ltd. is notified of in writing within, which comes first, one (1) year of shipment or 2400 total operation hours. NSK Ltd., at its option, and with transportation charges prepaid by the claimant, will repair or replace any product which has been proved to the satisfaction of NSK Ltd. to have a defect in material and/or workmanship.

This warranty is the sole and exclusive remedy available, and under no circumstances shall NSK Ltd. be liable for any consequential damages, loss of profits and/or personal injury as a result of claim arising under this limited warranty. NSK Ltd. makes no other warranty express or implied, and disclaims any warranties for fitness for a particular purpose or merchantability.

Copyright 2021 by NSK Ltd., Tokyo, Japan

All rights reserved.

No part of this publication may be reproduced in any form or by any means without permission in writing from NSK Ltd.

NSK Ltd. reserves the right to make changes to any products herein to improve reliability, function or design without prior notice and without any obligation.

NSK Ltd. does not assume any liability arising out of the Application or use of any product described herein; neither does it convey any license under its present patent nor the rights of others.


Contents

1. Introduction -----	1-1
1.1. Precautions for Use -----	1-1
2. Reference Number and Coding -----	2-1
2.1. PN Series Megatorque Motor -----	2-1
2.2. EDC Driver Unit for PN Series Megatorque Motor -----	2-1
2.3. Cable Set -----	2-3
2.4. HandyTerminal -----	2-3
3. Name of Each Part -----	3-1
4. Combination of Motor and Driver Unit -----	4-1
5. Motor Specifications -----	5-1
6. External Dimensions -----	6-1
6.1. PN Series Megatorque Motor -----	6-1
6.2. Driver Unit -----	6-2
7. Driver Unit Specifications -----	7-1
8. Installation -----	8-1
8.1. Environmental Conditions of Motor -----	8-1
8.2. Coupling Load to the Motor -----	8-1
8.3. Confirmations of Use Conditios -----	8-2
Appendix 1: How to Check Motor Condition -----	A-1


1. Introduction

- This is the supplementary of the instruction manual “EDC Driver Unit System (Document Number: C20158).” This supplement describes the Megatorque Motor System composed of the EDC Driver Unit and the PN series Megatorque Motor. Please refer to the above mentioned instruction manual (Document No.C20158) for items not described in this document.

1.1. Precautions for Use

 **Warning :** *Be sure not to activate the dynamic brake in the following conditions. Otherwise the dynamic brake circuit may break and the Motor will enter in a “free run” state, leading to possible injuries.*


- ◇ Do not activate the dynamic brake in normal operations. Stop the Motor by a control command, not by the dynamic brake. The dynamic brake is an auxiliary function to stop the Motor immediately in an emergency. In the middle of operation, an alarm, a warning or the “Emergency stop” input activates the dynamic brake.
 - Warnings that initiate “Servo-off” state are “A3” (Software thermal), “C0” (Position command/Feedback error), “C5” (Field bass error), “F5” (Program error), and “F8” (Automatic tuning error).
- ◇ The load inertia to a Motor must be 70 times or less than the Motor inertia (100 times for the PS1, PS3 and PN2 type Motors). In case of an indexing operation, a position command shall be 360 degrees or less, while the maximum speed for continual rotation must be 0.5 sec^{-1} or less.
(However, there may be a possibility to exceed the above limits in some cases. Please consult NSK when you require a close investigation on the limits.)
- ◇ For the PN4180 Motor, be sure to stop the Motor for 20 minutes or longer when you stop it by the dynamic brake.

 **Caution:** *When the Motor is continually accelerating a high inertial load with high acceleration, the system constantly outputs a high torque exceeding the rated torque, and thus likely to activate the warning “A3” (Software thermal). In such a case take a remedy to decrease the load inertia or to lower the speed.*

2. Reference Number and Coding

2. 1. PN Series Megatorque Motor

Fig.2-1: PN Motor

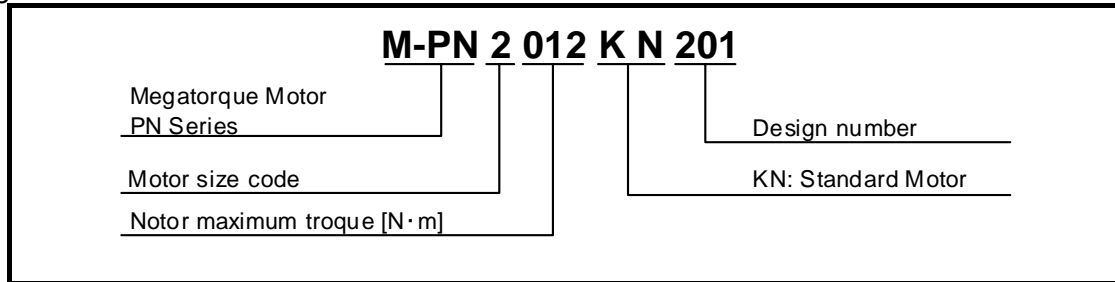

2. 2. EDC Driver Unit for PN Series Megatorque Motor

Fig. 2-3: EDC Driver Unit for PN2012 type Motor

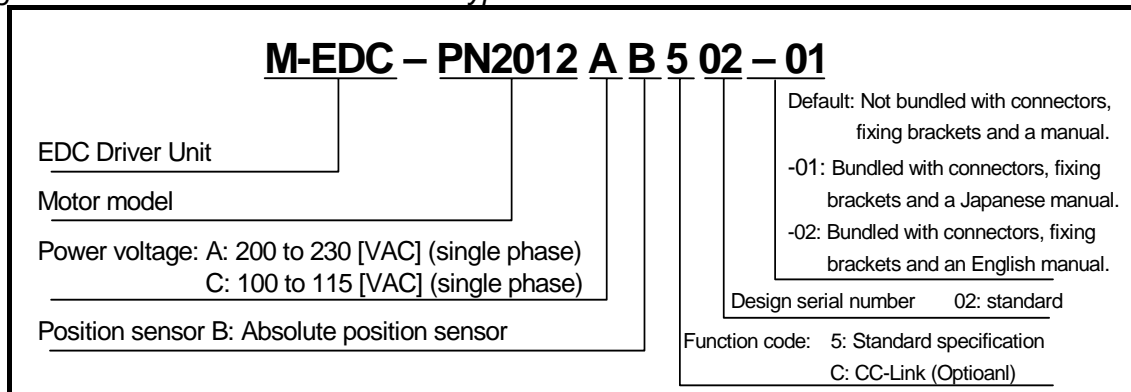


Fig.2-4: EDC Driver Unit for PN3045 types Motor



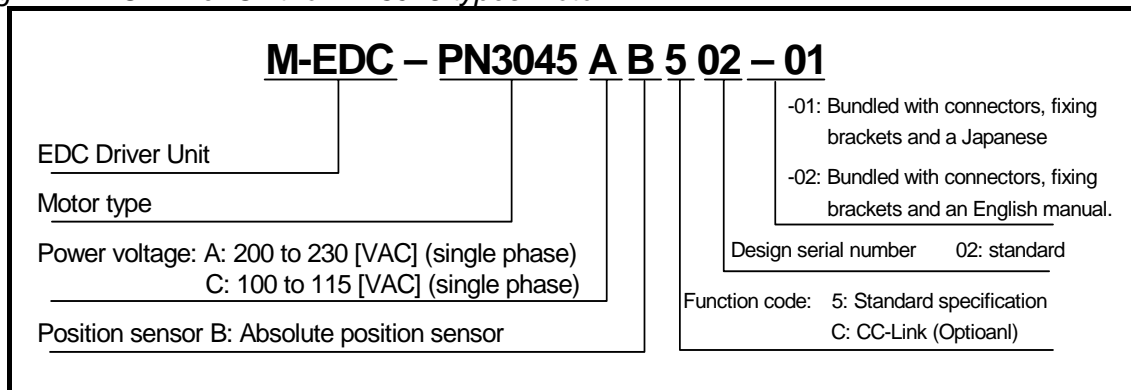


Fig.2-5: EDC Driver Unit for PN4135, and PN4180 types Motor

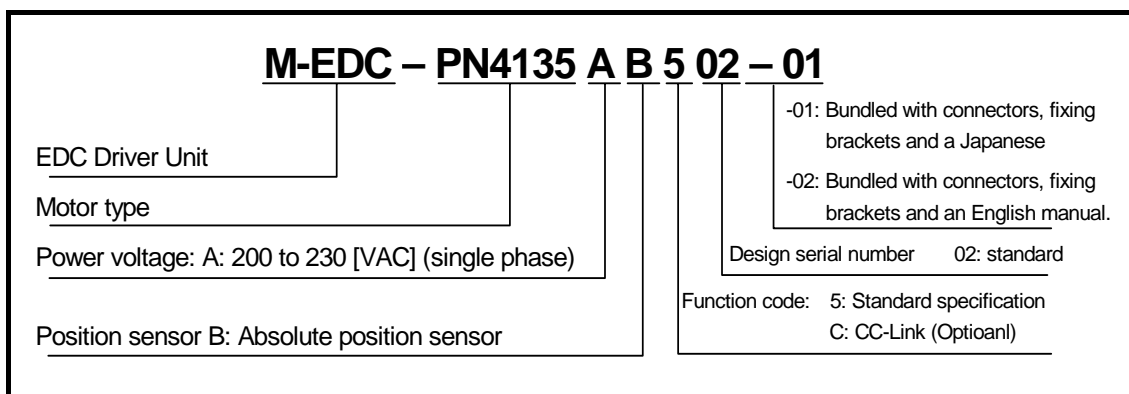


2.3. Cable Set

Fig 2-6: Reference number coding of Cable Set

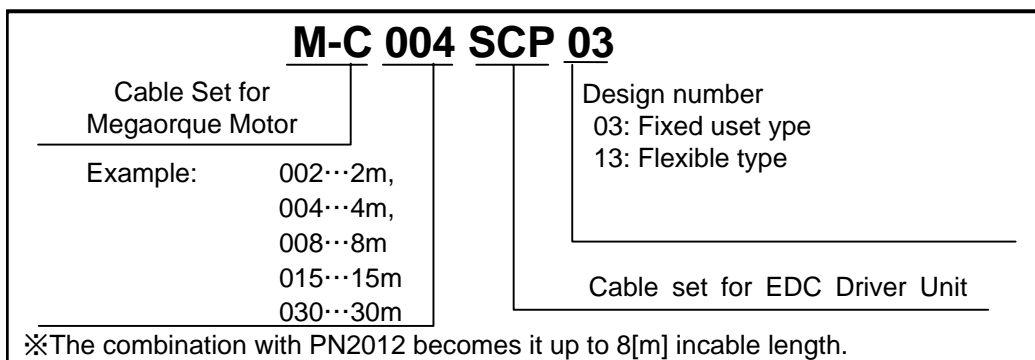

2.4. Handy Terminal

Fig 2-7: Reference number coding of Handy terminal

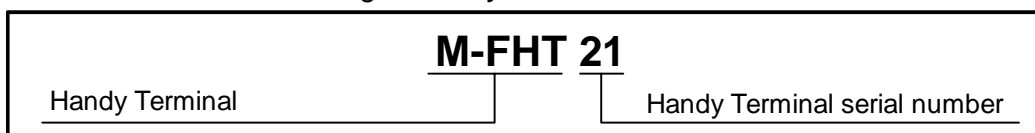

3. Name of Each Part

Fig 3-1: PN 2012 type Motor


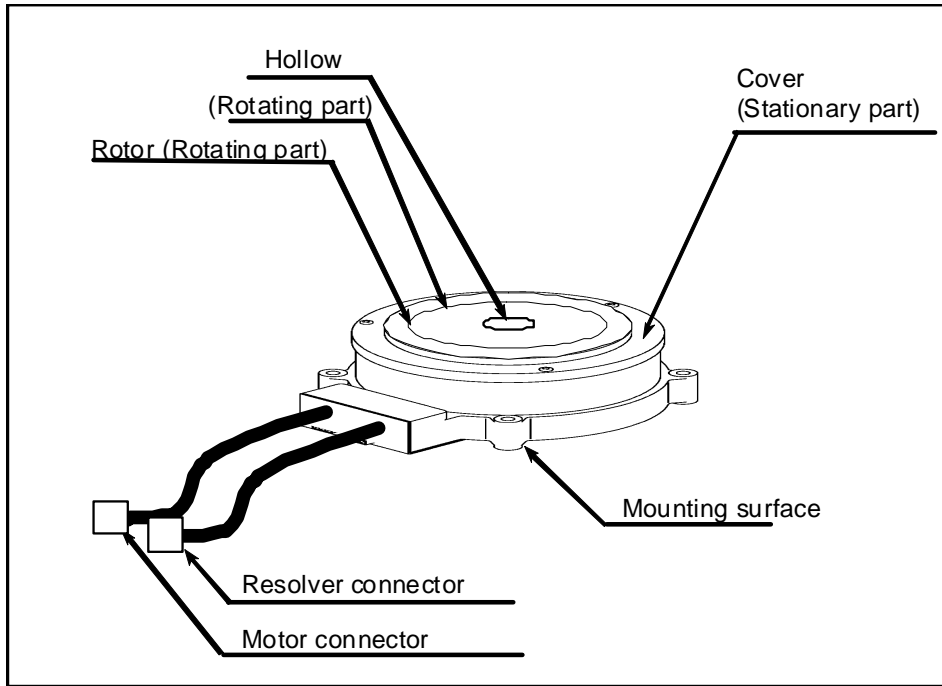


Fig. 3-2: PN3045, 4135, and 4180 type Motor

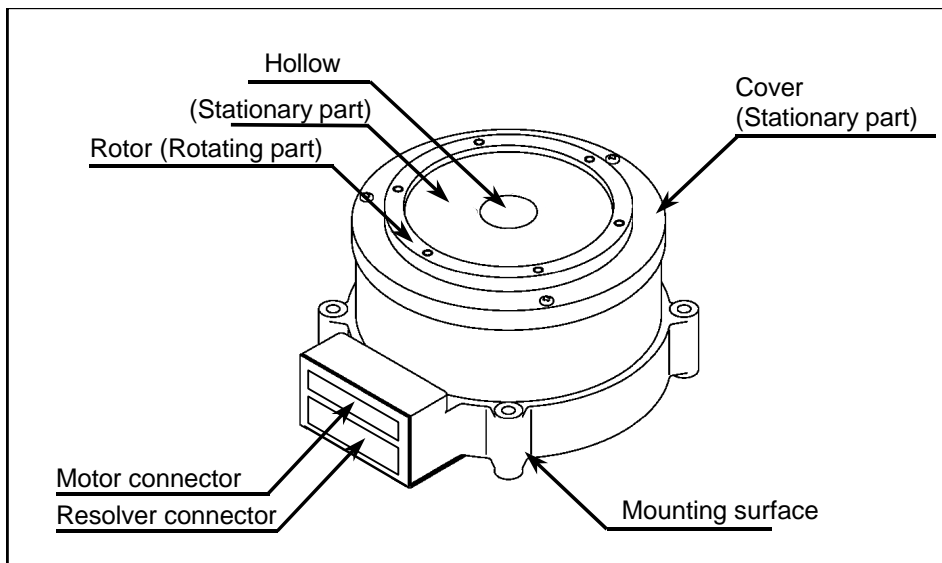

4. Combination of Motor and Driver Unit

Table4-1: Combination of PN2012 type Motor and Driver Unit

Motor diameter [mm]	Motor reference number	Driver Unit reference number ** : Code for specification of bundled items.	Power voltage [VAC]	Cable reference number	Remarks
ø176	M-PN2012KN201	M-EDC-PN2012AB502-**	200 to 230	M-C0**SCP03 (Fixed type cable)	• Pulse train input
		M-EDC-PN2012CB502-**	100 to 115	M-C0**SCP13 (Flexible type cable)	
		M-EDC-PN2012ABC02-**	200 to 230	** : Cable length in meters 01: 1 [m] 02: 2 [m] 03: 3 [m] 04: 4 [m] 05: 5 [m] 06: 6 [m] 07: 7 [m] 08: 8 [m]	• CC-Link
		M-EDC-PN2012CBC02-**	100 to 115		

Table4-2: Combination of PN3045, PN4135, PN4180 type Motor and Driver Unit

Motor diameter [mm]	Motor reference number	Driver Unit reference number ** : Code for specification of bundled items.	Power voltage [VAC]	Cable reference number	Remarks
ø210	M-PN3045KN001	M-EDC-PN3045AB502-**	200 to 230	M-C0**SCP03 (Fixed type cable)	• Pulse train input
		M-EDC-PN3045CB502-**	100 to 115	M-C0**SCP13 (Flexible type cable)	
		M-EDC-PN3045ABC02-**	200 to 230	** : Cable length in meters 01: 1 [m] 02: 2 [m] 03: 3 [m] 04: 4 [m] 05: 5 [m] 06: 6 [m] 07: 7 [m] 08: 8 [m] 09: 9 [m] 10: 10 [m] 15: 15 [m] 20: 20 [m] 30: 30 [m]	• CC-Link
		M-EDC-PN3045CBC02-**	100 to 115		
ø280	M-PN4135KN001	M-EDC-PN4135AB502-**	200 to 230		• Pulse train input
		M-EDC-PN4135ABC02-**			• CC-Link
	M-PN4180KN001	M-EDC-PN4180AB502-**			• Pulse train input
		M-EDC-PN4180ABC02-**			• CC-Link

5. Motor Specifications

Table 5-1: PN series Megatorque Motor

Reference number		M-PN2012KN201	M-PN3045KN001	M-PN4135KN001	M-PN4180KN001
Item [Unit]					
Motor outside diameter	[mm]	ø176	ø210	ø280	
Maximum output torque	[N•m]	12	45	135	180
Rated output torque	[N•m]	2	15	45	60
Motor height	[mm]	35	85	95	112
Motor hollow diameter	[mm]	36	56	50	50
Maximum velocity	[s ⁻¹]	2	3		
Rated velocity	[s ⁻¹]	1	1		
Resolution of position sensor	[Count/rev.]	2 621 440			
Absolute position accuracy	[arcsec.]	90 *1, *3			
Repeatability	[arcsec.]	±2			
Allowable axial load	[N]	1 000	4500	9500	
Allowable moment load	[N]	20 *2	80	160	200
Rotor inertia	[kg•m ²]	0.0024	0.011	0.057	0.065
Recommended moment load	[kg•m ²]	0.02 to 0.24	0.11 to 0.77	0.57 to 3.99	0.65 to 4.55
Mass	[kg]	3.7	13	26	31
International protection code		IP30 equivalent			
Environmental conditions		Ambient temperature: 0 to 40[°C] Humidity: 20 to 80 [%], In door use only. Free from condensation, dust and corrosive gas.			

• SI Unit System: 1N = 0.102 kgf. 1N•m = 0.102 kgf•m

*1. This accuracy is guaranteed at the temperature of 25 ±5 [°C].

*2. The use condition must clear the recommended moment load and the maximum radial load of 300[N].

*3. The cable length of PN2012 becomes it up to 8[m] .


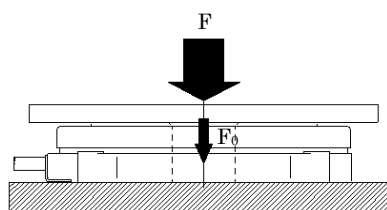
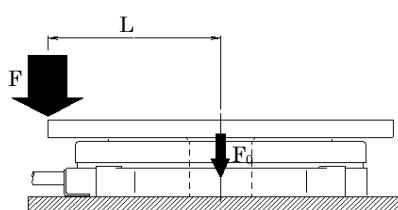
 **Caution** : Axial load F_a and Moment load M shall be less than the limits specified in the above table.

Fig. 5-1: Loads applied to a Motor




1) When F is an external force

- Axial load: $F_a = F + F_0$
- Moment load: $M = 0$



2) When F is an external force

- Axial load: $F_a = F + F_0$
- Moment load: $M = F \times L$

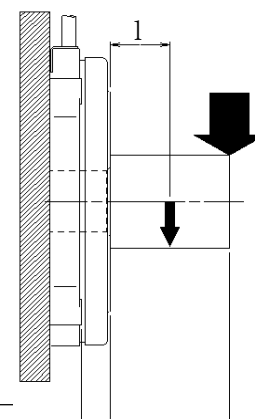

3) When F is an external vertical load

- Radial force: $F_r = F + F_0$
- Moment load: $M = F \times (L + A) + F_0 \times (L + A)$

Table 5-2 : Dimension A (distance between the bearing and the rotor)

Motor reference number	M-PN2012KN201	M-PN3045KN001	M-PN4135KN001	M-PN4180KN001
A [mm]	16.7	33.8	54.2	54.2

6. External Dimensions

6.1. PN Series Megatorque Motors

! Caution: Bending radius of the outgoing lines of Motor cable ($\phi 7$) and resolver cable ($\phi 7$) shall be R30 [mm] or more.

! Caution: Do not use outgoing lines of Motor cable and Resolver cable as a part of the flexible cable.

! Caution: Do not apply any stress (tension or vibration) to the connecting position of the outgoing lines and a connector. If not, it may result in a disconnection or a loose connection.

Fig. 6-1: PN2012 type Motor

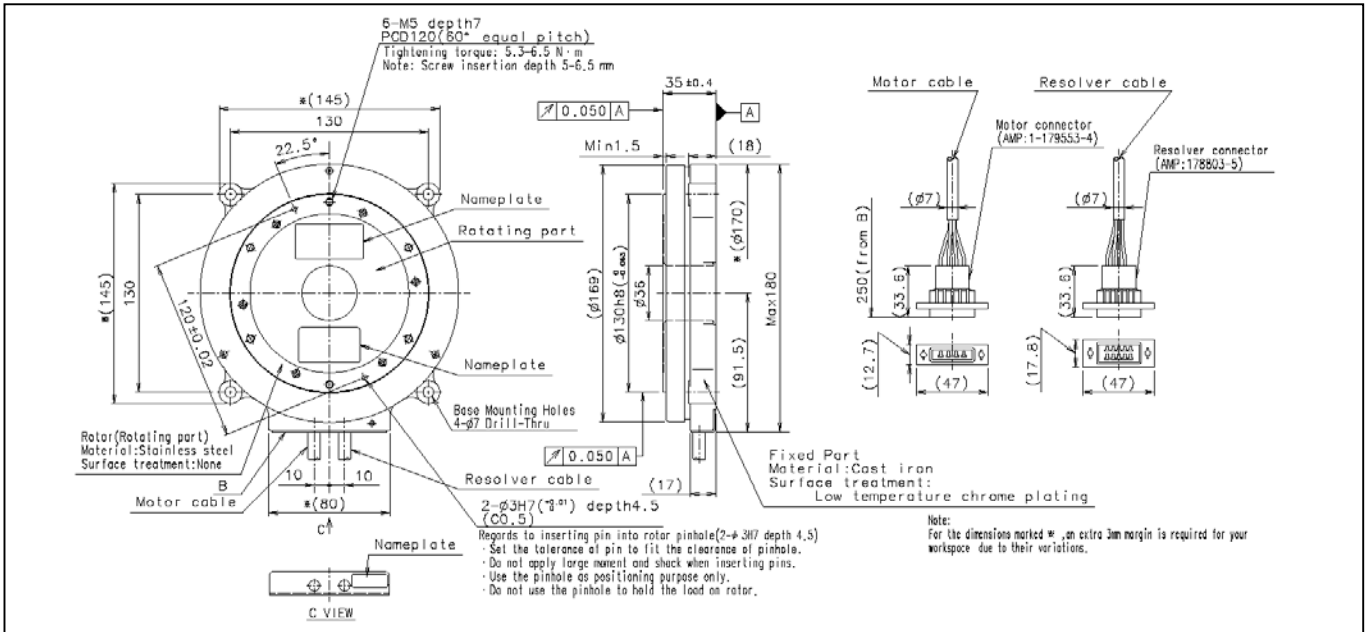


Fig. 6-2: PN3045type Motor

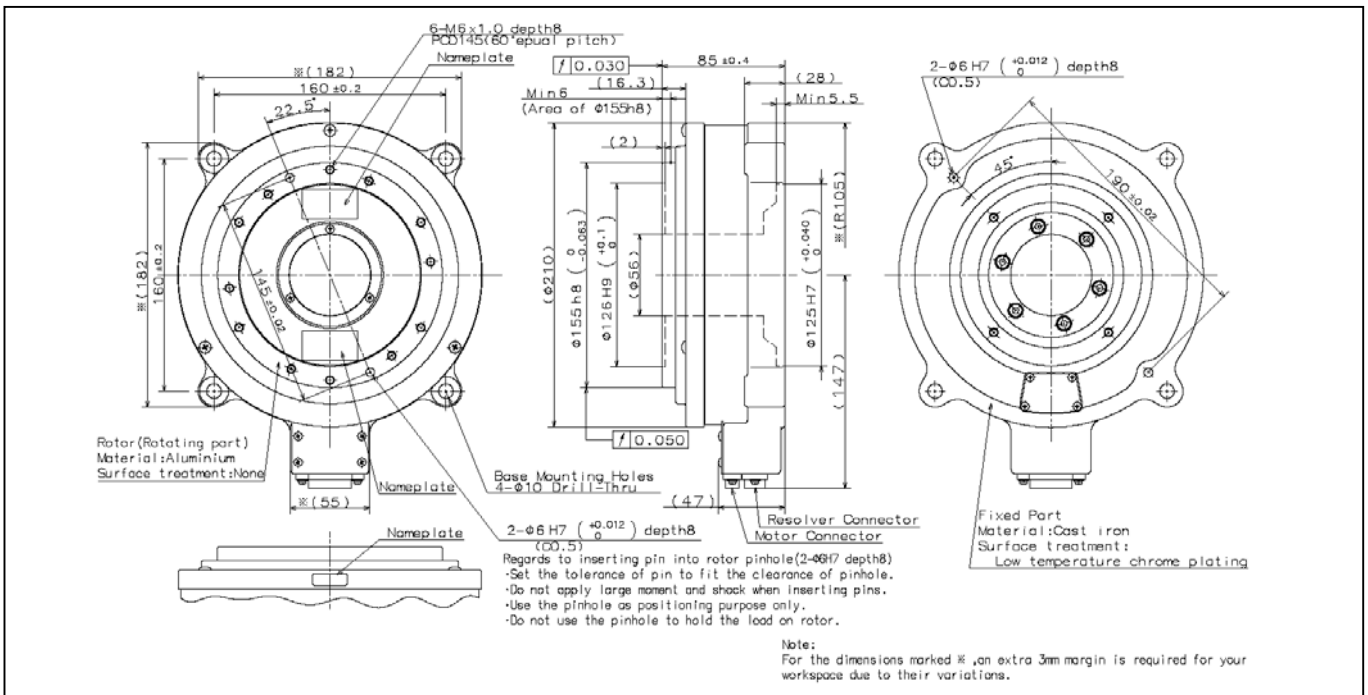


Fig 6-3: PN4135 type Motor


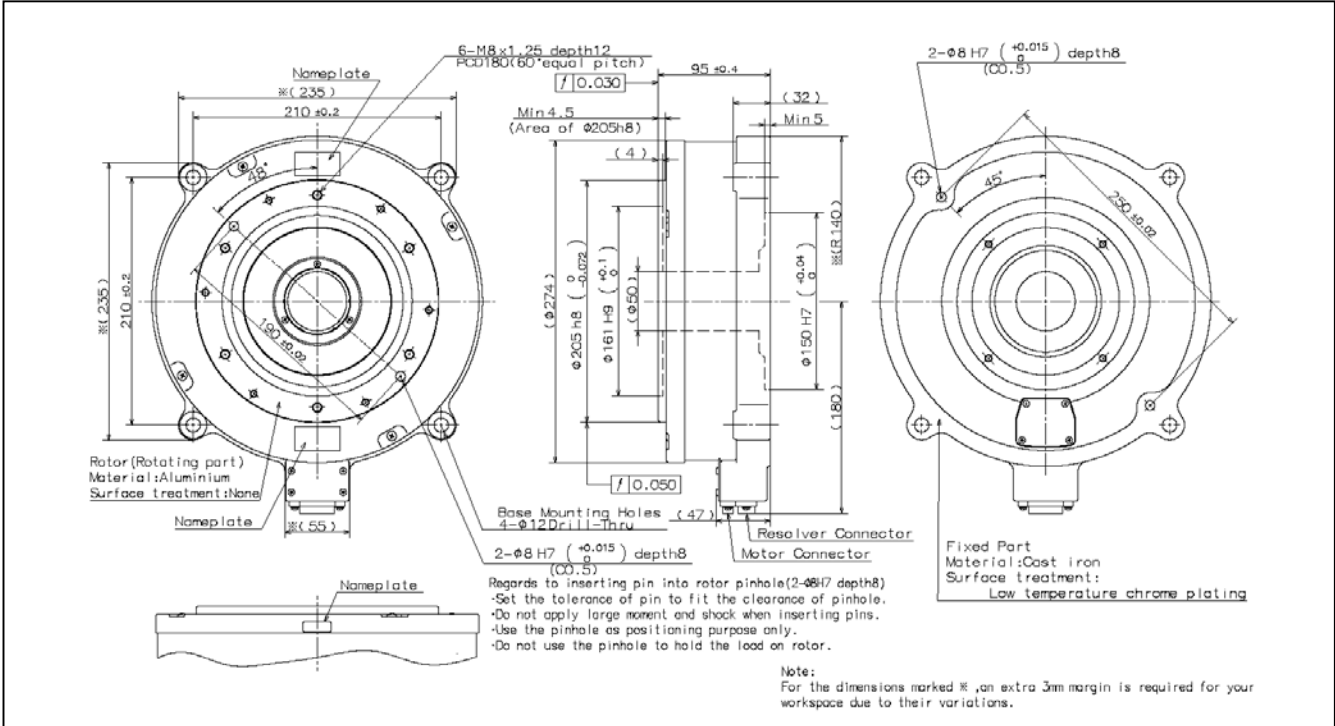


Fig 6-4: PN4180 type Motor

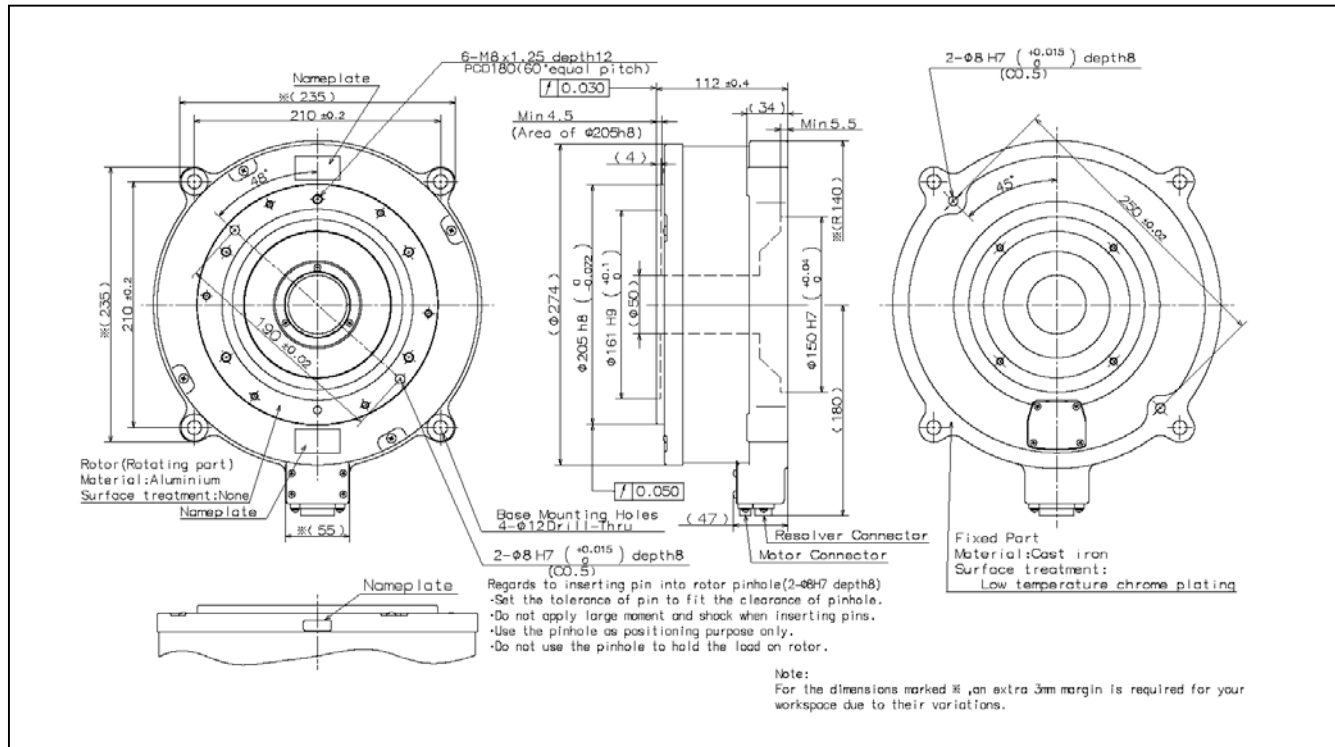

6.2. Driver Unit

Fig.6-5 : EDC Driver Unit for PN2012 type Motor

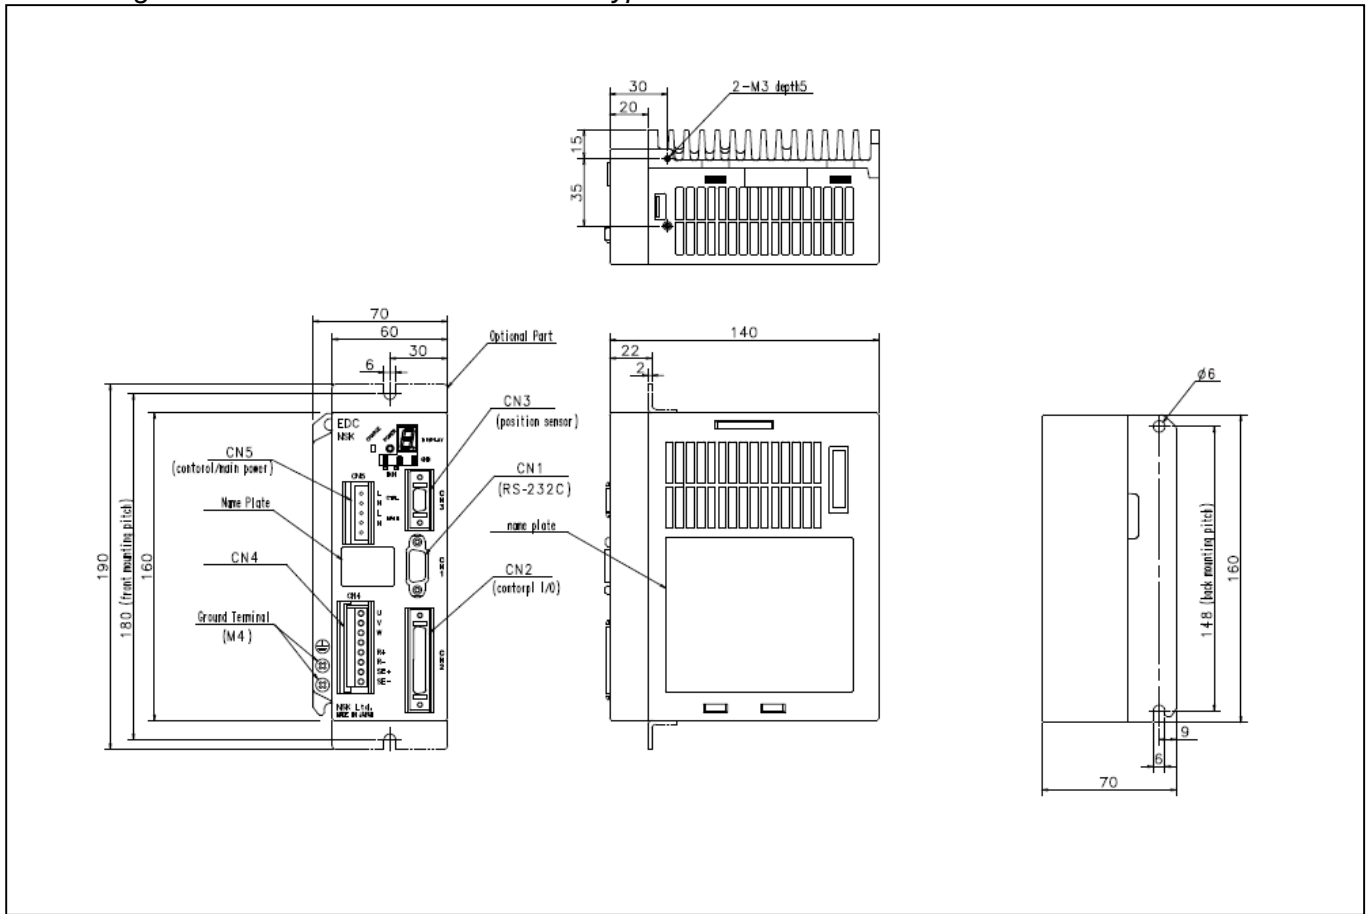


Fig. 6-6: CC-Link Compatible EDC Driver Unit for PN2012 type Motor

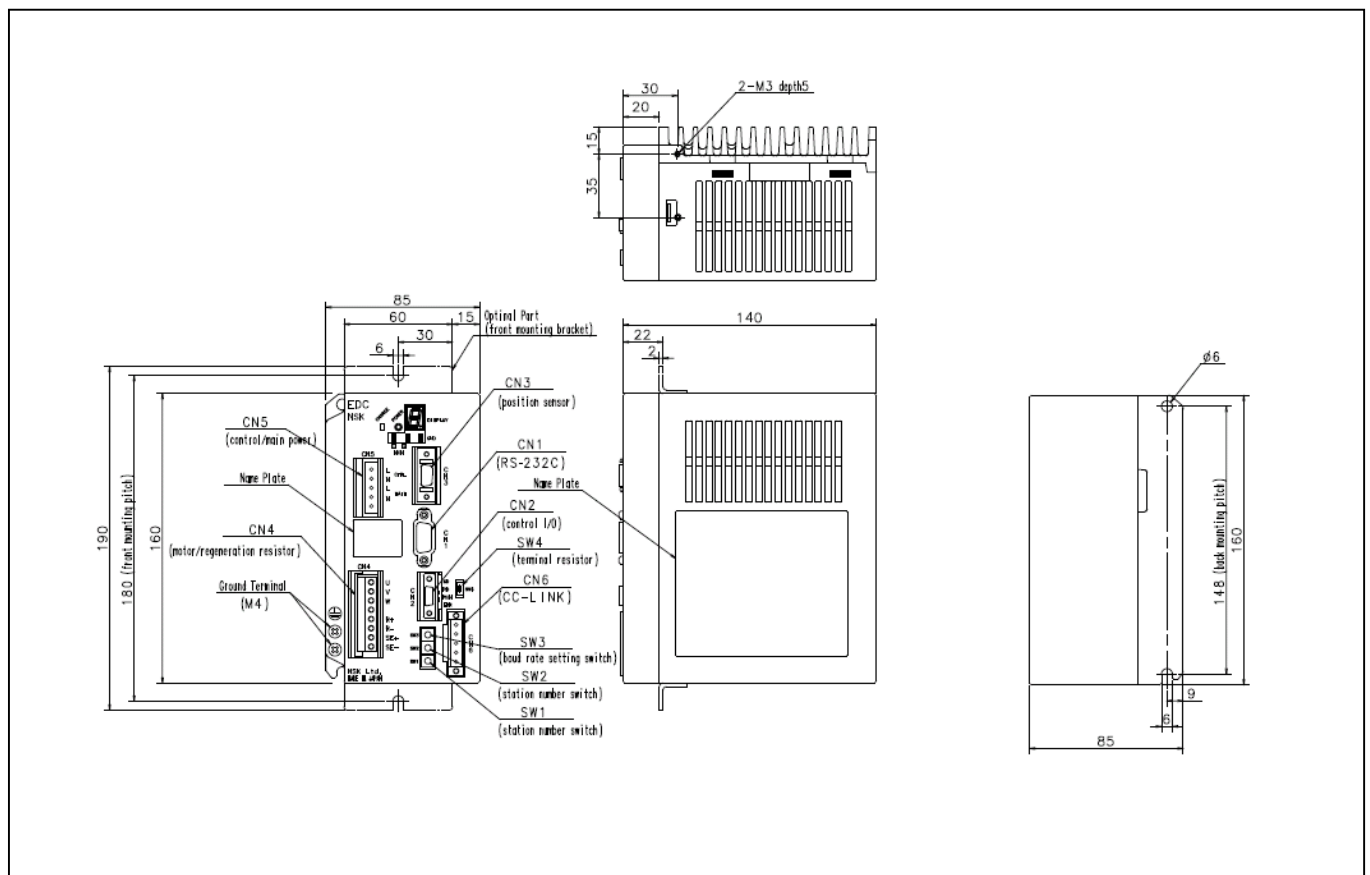


Fig. 6-7 EDC Driver Unit for PN3045, PN4135 and PN4180 Megatorque Motors


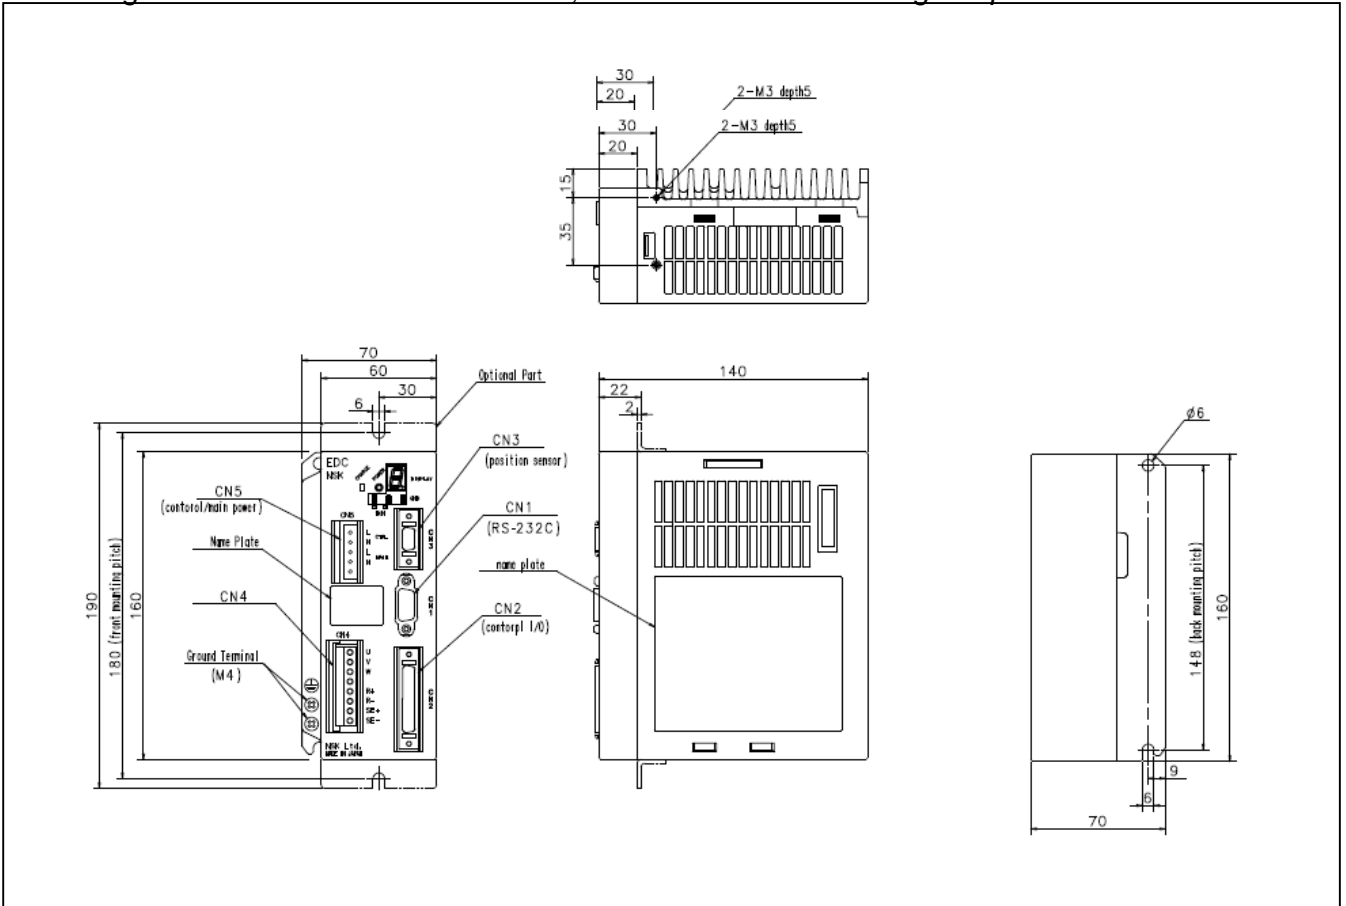


Fig. 6-8 CC-Link Compatible EDC Driver Unit for PN3045, PN4135 and PN4180 Megatorque Motors

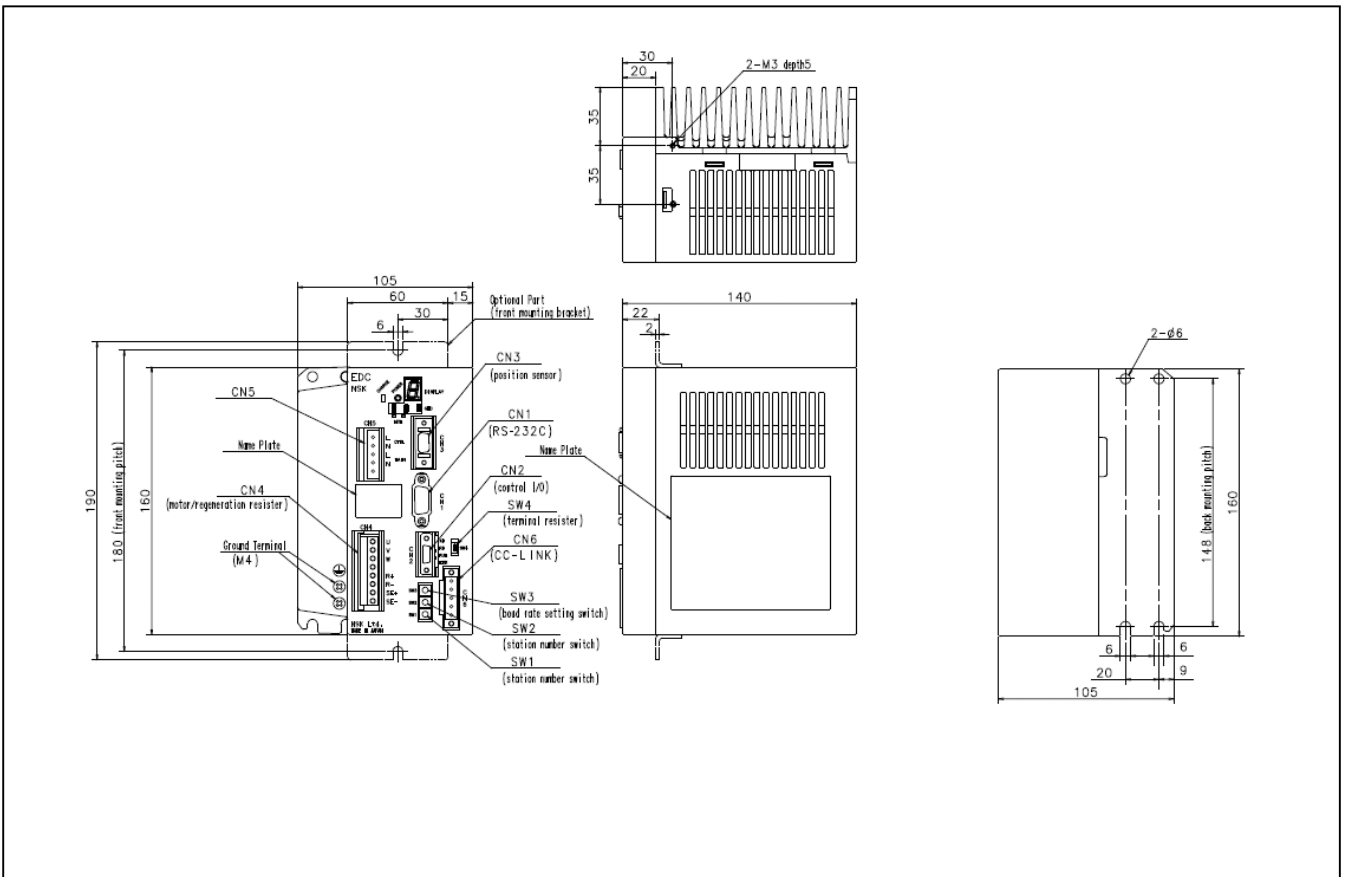

7. Driver Unit Specifications

Table 7-1: EDC Driver Unit

Item		PN2012	PN3045	PN4135	PN4180
Output current	Rated output [Arms]	1.2	4.5	4.5	4.5
	Maximum output [Arms]	6.5	14.9	14.9	14.9
Power input	Rated capacity [kVA]	0.1	0.5	0.9	1.1
	Max. capacity [kVA]	2.1	4.4	5.0	5.1
	Control power source	Single phase 100 to 115 [VAC] Single phase 200 to 230 [VAC] Fluctuation of voltage:±10[%] or less		Single phase 200 to 230 [VAC] Fluctuation of power voltage: ±10[%]	
	Main power source				
Position sensor resolution [count/rev]		2 621 440			
Maximum velocity [s ⁻¹]		2	3		
Positioning operation mode		Program operation (256 channels), Pulse train input, RS-232C serial communication command, Jog, Home Return			
Input signal	Pulse train command	Photo coupler input: Maximum pulse frequency: 1 [MHz] Input format: CW/CCW, Pulse and direction, ΦA/ΦB Electronic gear A/B multiple available (1 000 to 5 242 880 [count/rev])			
	Control input	Photo coupler input (±Common available), 17 input ports, 24 [V] input voltage Emergency stop, Alarm clear, Over travel limit +/-, Servo ON, Program operation start, Stop, Internal program 内 channel switching (0 to 7), Jog, Jog direction, (Hold, Velocity override, Integration OFF, Home return start and Home position limit)* ¹			
Output signal	Position feedback signal	Signal format: ΦA/ΦB/ΦZ line drive, Free resolution setting to ΦA/ΦB available. Resolution of ΦA/ΦB: • Shipping set: 20 480 [count/rev.] (Quadrupled: 81 920 [count/rev]) • Maximum 1 310 720 [count/rev] (Quadrupled: 5 242 880 [Count/rev]) * The maximum signal frequency is limited to 781 [kHz] and thus the setting of resolution limits the maximum revolution speed. (Maximum speed: [s ⁻¹] = 781 [kHz]/Resolution of ΦA [or ΦB] Resolution of ΦZ: 80 [count/rev]			
	Control output	Photo coupler output (±Common available), 7 output ports. Maximum switching capacity: 24 [VDC]/50 [mA] Driver unit ready, Warning, Over travel limit detection +/- direction, Servo state, Busy, In-position, Target proximity A (Target proximity B, Zone A•B•C, Travel limit +/-, Normal, Position error under/over, Velocity error under/over, Torque command under/over, Thermal loading under/over, Home return complete, Home position defined)* ¹			
Alarm		Excess error, Program error, Automatic tuning error, Position command/Feedback error, Field bus warning, Software thermal error, Home position undefined, Main AC line under voltage, Travel limit over, RAM error, ROM error, System error, Interface error, ADC error, Emergency stop, CPU error, Fieldbus error, Position sensor error, Absolute position error, Motor cable disconnected, Excess velocity, Resolver excitation amplifier alarm, Commutation error, Overheat, Main AC line over voltage, Excess current, Control AC line under voltage, Power module error			
Monitors		Analog monitor ×2 (Free range and offset setting), RS-232C monitor			
Communication		RS-232C serial communication (Asynchronous, 9 600 [bps])			
Data backup		EEPROM (Overwriting and deleting of parameters are limited to 100 000 times.)			
Others		• Automatic tuning • Function setting to Input/Output port • Temporal parameter setting by a program operation. • Individual setting of acceleration and deceleration • Acceleration profiling (Modified sine, Modified trapezoid, Cycloid and Half sine)			
Fieldbus		CC-Link Ver.1.10 compatible (Optional EDC Driver Unit compatible to CC-Link is required.)			
Environment	• Ambient temperature • Storage temperature	• Ambient temperature: 0 to 50[°C] • Storage temperature -20 to 70[°C]			
	Ambient/storage humidity	90[%] or less (No condensation)			
	Vibration resistance	4.9 [m/s ²]			
Built-in function	Regeneration	Optional dump resistor available when the regeneration current is beyond the capacity of built-in resistor. (M-E014DCKR1-100, M-E014DCKR1-101) • Connect to R+,R-,SE+ and SE-. (Never short-circuit them.)			
	Dynamic brake	Functions at the state of Power-off, Servo-off and Warning. The command KB terminates the dynamic brake function. (Refer to "9.2. Glossary of Command and parameter.)			
Compatible safety regulation	UL	UL508C			
	CE Marking	LVD	EN61800-5-1		
		EMC	EMI : EN55011EMS : EN61000-6-2		
Connectors	RS-232C	CN1	D-sub 9 pins		
	Control I/O	CN2	Standard: half pitch connector 50 pins CC-Link compatible: Half pitch 10 pins		
	Position sensor	CN3	Half pitch connector 14 pins		
	Motor/Optional dump resistor	CN4	Plastic connector (UL and CE qualified)		
	Control/Main power	CN5	Plastic connector (UL and CE qualified)		
	CC-Link	CN6	Plastic connector 5 pins		
Mass [kg]		Standard: 1.1 CC-Link compatible: 1.3		Standard: 1.8 CC-Link compatible: 2.0	

*1: These functions become effective by changing some functional allocation of control Input/Output.


8. Installation

8.1. Environmental Conditions of Motor


- Use the Motor in the indoor conditions free from dust and corrosive gas.
- The operating ambient temperature of the Motor shall be 0 to 40°C.
- The PN type Megatorque Motors are neither dust-proof nor waterproof. Do not expose the Motor to water or oil from any source.
- It is essential to securely fix the Motor to a mounting base of which rigidity is sufficient enough. . Otherwise, mechanical resonance may occur.

 **Warning :** *When fixing the Motor, use bolt holes on its bottom.*

- The flatness of the mounting surface for the Motor shall be 0.02 mm or less.
- The Motor can be mounted vertically or horizontally.


 **Caution:** *Do not connect the outgoing lines of the Motor cable and resolver cable of the PN2012 type Motor to a moving part. The bending radius of the outgoing lines shall be R30 mm or more.*

8.2. Coupling a Load to the Motor

 **Warning :** *Fix the load using the bolt holes on the rotor surface. Be sure to fasten the bolts firmly.*

- The table bellow shows the tightening torque of bolt and thread depth for each Motor type.

Motor type	PN2012	PN3045	PN4135	PN4180
Tightening torque [N·m]	5.3 to 6.5	7.8 or less	20 or less	20 or less
Thread depth [mm]	5 to 6.5	6 to 7.5	10 to 11.5	10 to 11.5

 **Caution:** *When using the pinhole on the rotor, please follow the notes below.*

- Set the tolerance of pin diameter to a lose fit.
- Do not apply excessive load or shock to the Motor when inserting the pin to the pinhole.
- The pinhole is simply for positioning of a load to the Motor. Do not use the pinhole to support the load.

8.3. Confirmation of Use Conditions

- In case of the Megatorque Motor system, the moment of inertia of load is extremely higher than that of the rotor. The table bellow shows the allowable moment of inertia for each Motor type.

Table 8-1 : Allowable moment of inertia for Motor

Motor type	Moment of inertia of the rotor [kg·m ²]	Allowable moment of inertia [kg·m ²]
PN2012	0.0024	0.24
PN3045	0.011	0.77
PN4135	0.057	3.99
PN4180	0.065	4.55



Caution: Be sure to confirm the allowable moment load and axial load to the Motor under the use conditions.

- Please refer to “5. Motor Specifications” for the allowable moment load and axial load for each Motor.

Appendix 1: How to Check Motor Condition

- Examine the resistance and the insulation resistance of the Motor winding to check if the Motor is in normal condition. It can be regarded as it is normal if all check results are within the specifications.
- First, check the winding resistance including the Motor cable. If the result is not satisfactory, check the Motor only.

1. Resistance check of Motor winding

Fig A-1: Check with the cable set


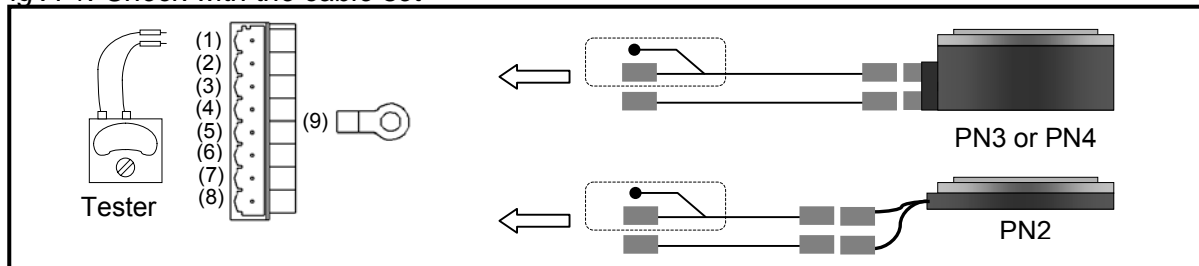


Fig A-2: Check with the Motor only

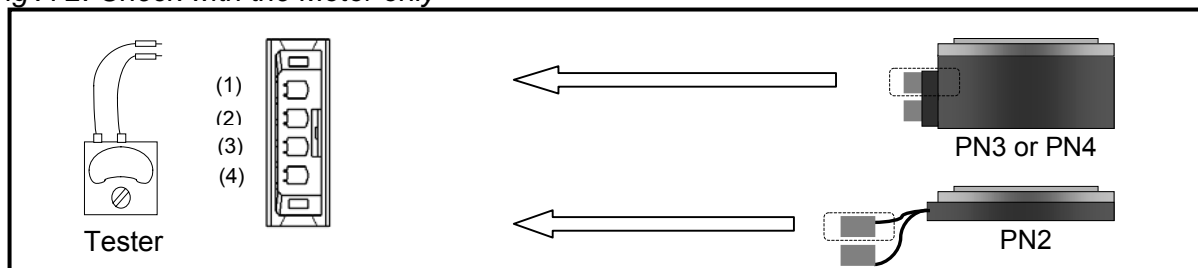

- Do not turn the rotor while checking the Motor winding.

Table A-1: Checking points

	Cable connector	Motor connector	Result
Phase UV	(1) ↔ (2) (U) (V)	(1) ↔ (2) (U) (V)	
Phase VW	(2) ↔ (3) (V) (W)	(2) ↔ (3) (V) (W)	
Phase WU	(3) ↔ (1) (W) (U)	(3) ↔ (1) (W) (U)	

Table A-2: Resistance specification of Motor winding

Motor type	Winding resistance [Ω]	Specification
PN2012	15.2	1. $\pm 30\%$ of the value in the left 2. Variation between each phase UV, VW, and WU is less than 15%
PN3045	1.9	
PN4136	2.6	
PN4180	3.2	

- Please ask NSK for a Motor with special winding specifications or a Cable longer than 4 m.

2. Resistance check of the resolver winding

Fig A-3: Check with the Cable set

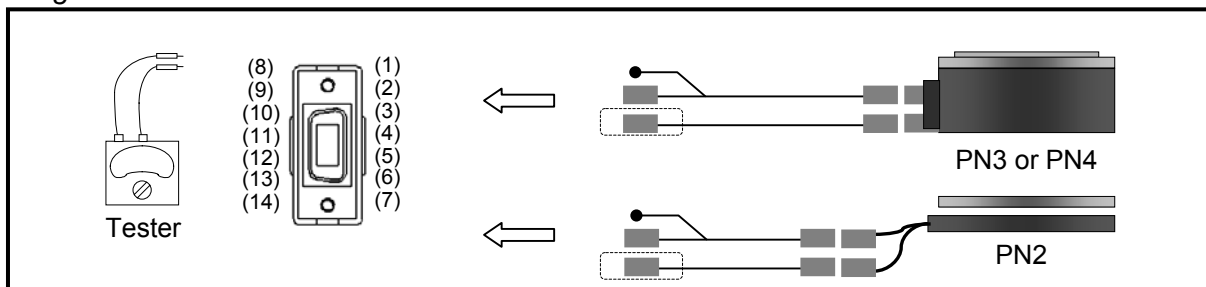


Fig A-4: Check with the Motor only


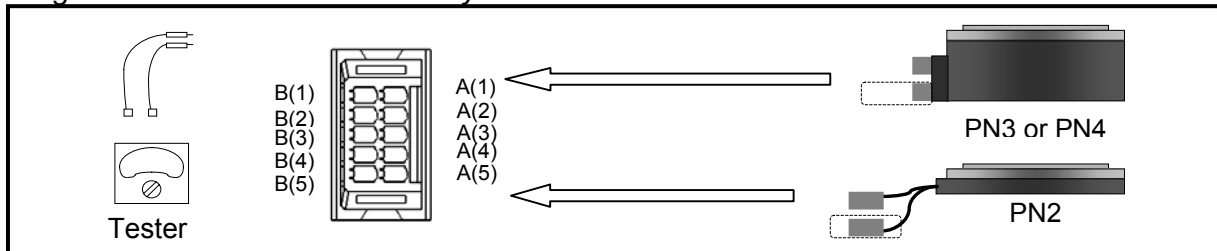


Table A-3: Checking points of the resolver with an absolute position sensor and winding resistance


	Cable connector	Motor connector	Result	Specification
INC-A	(1) ↔ (9) (INC-A) (INC·COM)	A(1) ↔ A(4) (INC-A) (INC·COM)		1. Resistance • PN2012: $7.7 \pm 1 \Omega$ • PN3 and PN4: $9.8 \pm 1 \Omega$ 2. Variation between each phase A, B and C shall be 1.0Ω or less.
INC-B	(2) ↔ (9) (INC-B) (INC·COM)	A(2) ↔ A(4) (INC-B) (INC·COM)		
INC-C	(3) ↔ (9) (INC-C) (INC·COM)	A(3) ↔ A(4) (INC-C) (INC·COM)		
ABS-A	(5) ↔ (8) (ABS-A) (ABS·COM)	B(1) ↔ B(4) (ABS-A) (ABS·COM)		1. Resistance • PS1 type: $8.3 \pm 1 \Omega$ • PS3 type: $9.8 \pm 1 \Omega$ 2. Variation between each phase A, B and C shall be 1.0Ω or less.
ABS-B	(6) ↔ (8) (ABS-B) (ABS·COM)	B(2) ↔ B(4) (ABS-B) (ABS·COM)		
ABS-C	(7) ↔ (8) (ABS-C) (ABS·COM)	B(3) ↔ B(4) (ABS-C) (ABS·COM)		

* Please ask NSK for the specifications of the Motor with special winding, and the Cable longer than 4 [m].

Fig A-5: Connection of the Motor with the absolute position sensor [Reference only]

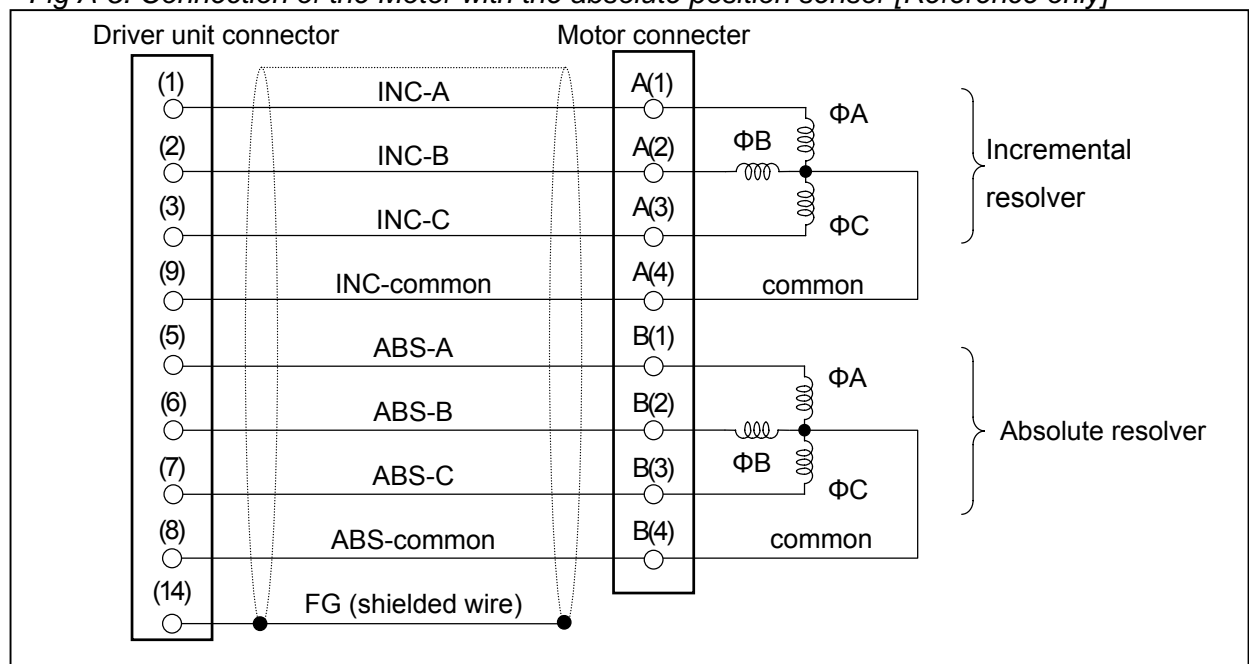

3. Insulation resistance check of Motor winding

 *Caution: Disconnect the Motor from the Driver Unit when checking insulation resistance of the Motor.*

 *Caution: Checking voltage must be 500[VDC] or less.*

Fig A-6: Check with the Cable

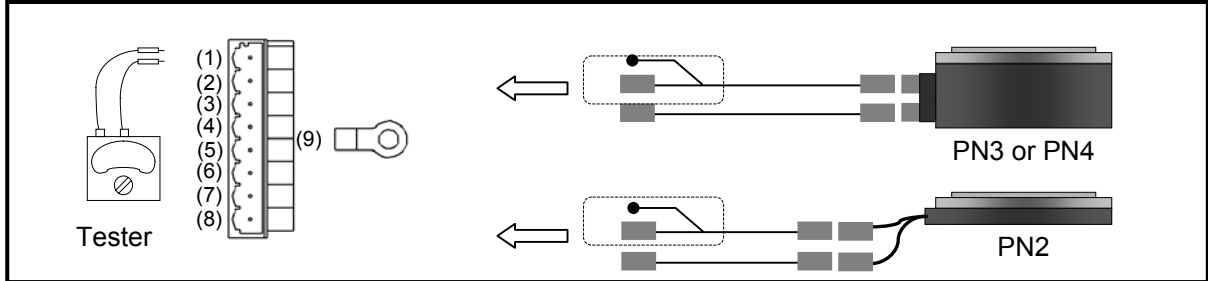


Fig A-7: Check the Motor only

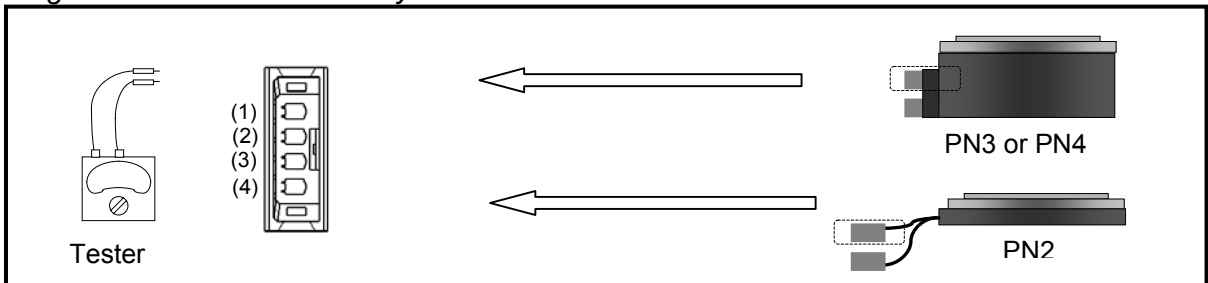


Table A-4: Checking point

	Cable connector	Motor connector	Result
$\phi U - PE$	(1) ↔ (9) (U) (PE)	(1) ↔ (4) (U) (PE)	
$\phi V - PE$	(2) ↔ (9) (V) (PE)	(2) ↔ (4) (V) (PE)	
$\phi W - PE$	(3) ↔ (9) (W) (PE)	(3) ↔ (4) (W) (PE)	

Table A-5: Specification of insulation resistance (Common to all type of Motor)

	Specification
With cable	1 [MΩ] or over
Motor only	2 [MΩ] or over

4. Visual check of the Motor and the Cables

- Check the Motor for any damage.
- Check the cable for any damage on the cable insulation.

(Blank Page)

MEGATORQUE MOTOR SYSTEM

PN Motor Series

EDC Driver Unit

User's Manual

Document Number: C20169-05

Nov 1, 2007	1st Edition
Sep 30, 2009	2nd Edition
Mar 1, 2012	3rd Edition
Dec 25, 2012	4th Edition
Dec 21, 2021	5th Edition

NSK Ltd.

Worldwide Sales Offices

P: Phone ☆: Head Office

NSK LTD. HEADQUARTERS, TOKYO JAPAN

INDUSTRIAL MACHINERY BUSINESS DIVISION-HEADQUARTERS P: +81-3-3779-7227
 AUTOMOTIVE BUSINESS DIVISION-HEADQUARTERS P: +81-3-3779-7189

Africa

South Africa:

NSK SOUTH AFRICA (PTY) LTD.
 SANDTON P: +27-011-458-3600

Asia and Oceania

Australia:

NSK AUSTRALIA PTY. LTD.
 MELBOURNE ☆ P: +61-3-9765-4400
 SYDNEY P: +61-2-9839-2300
 BRISBANE P: +61-7-3347-2600
 PERTH P: +61-8-9256-5000

New Zealand:

NSK NEW ZEALAND LTD.
 AUCKLAND P: +64-9-276-4992

China:

NSK (SHANGHAI) TRADING CO., LTD.
 JIANGSU ☆ P: +86-512-5796-3000

NSK (CHINA) INVESTMENT CO., LTD.

JIANGSU ☆ P: +86-512-5796-3000
 BEIJING P: +86-10-6590-8161
 TIAN JIN P: +86-22-8319-5030
 CHANGCHUN P: +86-431-8898-8682
 SHENYANG P: +86-24-2334-2868
 DALIAN P: +86-411-8800-8168
 NANJING P: +86-25-8472-6671
 FUZHOU P: +86-591-8380-1030
 WUHAN P: +86-27-8556-9630
 QINGDAO P: +86-532-5568-3877
 GUANGZHOU P: +86-20-3817-7800
 CHANGSHA P: +86-731-8571-3100
 LUOYANG P: +86-379-6069-6188
 XI'AN P: +86-29-8765-1896
 CHONGQING P: +86-23-6806-5310
 CHENGDU P: +86-28-8528-3680

NSK CHINA SALES CO., LTD.

JIANGSU ☆ P: +86-512-5796-3000

NSK HONG KONG LTD.

HONG KONG ☆ P: +852-2739-9933
 SHENZHEN P: +86-755-25904886

Taiwan:

TAIWAN NSK PRECISION CO., LTD.

TAIPEI ☆ P: +886-2-2772-3355
 TAICHUNG P: +886-4-2708-3393
 TAINAN P: +886-6-215-6058

India:

NSK BEARINGS INDIA PRIVATE LTD.

CHENNAI ☆ P: +91-44-2847-9600
 MUMBAI P: +91-22-2838-7787
 JAMSHEDPUR P: +91-657-2421144
 GURGAON P: +91-124-4838000

Indonesia:

PT. NSK INDONESIA
 JAKARTA P: +62-21-252-3458

Korea:

NSK KOREA CO., LTD.
 SEOUL P: +82-2-3287-0300

Malaysia:

NSK BEARINGS (MALAYSIA) SDN.BHD.
 SHAH ALAM ☆ P: +60-3-7803-8859
 PRAI P: +60-4-3902275
 JOHOR BAHRU P: +60-7-3546290
 IPOH P: +60-5-2555000

Philippines:

NSK REPRESENTATIVE OFFICE
 MANILA P: +63-2-893-9543

Singapore:

NSK INTERNATIONAL (SINGAPORE) PTE LTD.
 SINGAPORE P: +65-6496-8000

NSK SINGAPORE (PRIVATE) LTD.

SINGAPORE P: +65-6496-8000

Thailand:

NSK BEARINGS (THAILAND) CO., LTD.
 BANGKOK P: +66-2320-2555

Vietnam:

NSK VIETNAM CO., LTD.
 HANOI P: +84-24-3955-0159

NSK REPRESENTATIVE OFFICE

HO CHI MINH CITY P: +84-28-3822-7907

Europe

United Kingdom:

NSK EUROPE LTD. (EUROPEAN HEADQUARTERS)
 MAIDENHEAD P: +44-1628-509-800

NSK UK LTD.

NEWARK P: +44-1636-605-123

France:

NSK FRANCE S.A.S.
 PARIS P: +33-1-30-57-39-39

Germany:

NSK DEUTSCHLAND GMBH
 DUSSELDORF ☆ P: +49-2102-4810
 STUTTGART P: +49-711-79082-0
 WOLFSBURG P: +49-5361-27647-10

Italy:

NSK ITALIA S.P.A.
 MILANO P: +39-299-5191

Netherlands:

NSK EUROPEAN DISTRIBUTION CENTRE B.V.
 TILBURG P: +31-13-4647647

Poland:

NSK REPRESENTATIVE OFFICE
 WARSAW P: +48-22-645-1525

Russia:

NSK POLSKA SP. Z O.O.
 SAINT-PETERSBURG P: +7-812-332-5071

Spain:

NSK SPAIN S.A.
 BARCELONA P: +34-93-289-2763

Turkey:

NSK RULMANLARI ORTA DOGU TIC. LTD. STI.
 ISTANBUL P: +90-216-5000-675

United Arab Emirates:

NSK BEARINGS GULF TRADING CO.
 DUBAI P: +971-(0)4-804-8200

North and South America

United States of America:

NSK AMERICAS, INC. (AMERICAN HEADQUARTERS)
 ANN ARBOR P: +1-734-913-7500

NSK CORPORATION

ANN ARBOR P: +1-734-913-7500

NSK PRECISION AMERICA, INC.

FRANKLIN ☆ P: +1-317-738-5000
 SAN JOSE P: +1-408-944-9400

NSK LATIN AMERICA, INC.

MIAMI P: +1-305-477-0605

Canada:

NSK CANADA INC.
 TORONTO ☆ P: +1-888-603-7667
 MONTREAL P: +1-514-633-1220

Argentina:

NSK ARGENTINA SRL
 BUENOS AIRES P: +54-11-4704-5100

Brazil:

NSK BRASIL LTDA.
 SUZANO ☆ P: +55-11-4744-2500
 JOINVILLE P: +55-47-3422-2239

Peru:

NSK PERU S.A.C.
 LIMA P: +51-493-4385

Mexico:

NSK RODAMIENTOS MEXICANA, S.A. DE C.V.
 SILAO, GUANAJUATO P: +52-472-500-9500

<As of August 2021>

For the latest information, please refer to the NSK website.

www.nsk.com

Every care has been taken to ensure the accuracy of data in this publication, but NSK Ltd. accepts no liability for any loss or damage incurred from errors or omissions. As we pursue continuous improvement, all content (text, images, product appearances, specifications, etc.) contained in this publication is subject to change without notice. Unauthorized copying and/or use of the contents of this publication is strictly prohibited.

Please investigate and follow the latest product export laws, regulations, and permit procedures when exporting to other countries.

For more information about NSK products, please contact: _____